



**Инструкция
по монтажу тягово-сцепного
устройства шарового типа 1206 Н
для автомобилей
ВАЗ-2108; -2109;
-21099**

: -2108	1984-...
-2109	1987-...
-21099	1990-...
	600
	75
	8



« - »;
" (8182) 22-48-15
" 8(8442) 98-74-98
" 8(343) 379-39-89, 373-42-73
" " 8(343) 26-88-308
" 8(3952) 710-194
" 8(495) 777-54-59
" 8(495)745-79-11
" 8(495) 788-95-97
" 8(495) 720-51-03
" 8(3532) 57-99-85
" 8-905-899-5012
" 8(383) 291-59-60
" 8(831) 279-53-24
" 8(3422) 98-27-20
" 8(342) 220-87-87
" 8-927-002-90-06
" 8(3462) 24-00-44
" 8(3842) 21-14-76
" 8-902-940-4151
" 8(3452) 32-22-12, 41-52-62
" 8-961-213-0278
" 8-917-347-1700
" 8(351) 269-44-75, 900-72-73
" 8(3512) 773-76-91

462800, « - »
" 18 "
" : (35363) 7-05-06
" : (35363) 7-13-20
" (495) 785-66-07
www.bosal-autoflex.ru

..... :

..... VIN

.....

.....

1. ()
2.
3.
4. 1000
90 /

1. « - » 12

2. 8.8.

3.

41.55-2005.



)

Ø 18 (

10 80,

L=53

Ø 11

(

Ø 18

)

L=53


2

Ø 11

10 30.


1			
2			
3			
4			
5			
6			
7			

	1
	1
	1

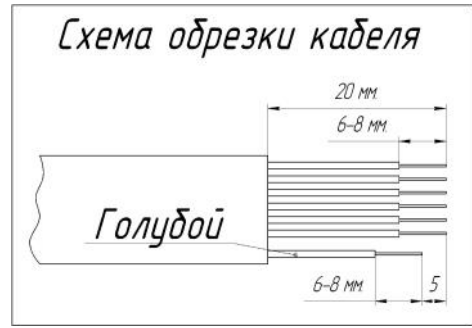

*Болт M10x80
Шайба 40x40x3
Втулка L=53
Шайба 10
Гайка M10 с/контр*

*Болт M10x30
Шайба 10x33
Шайба 10
Гайка M10 с/контр*

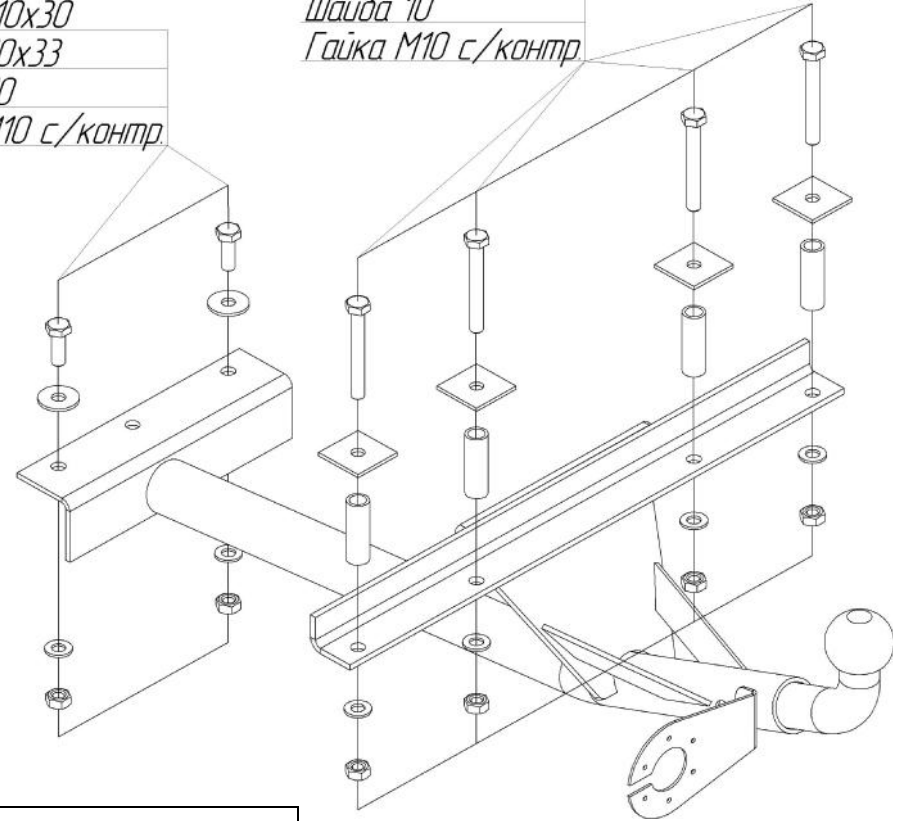

		3
10 30		2
10 80		4
10 /		6
10 ()		2
10		6
10 40 40 3		4
L = 53		4
		1
	130	1
		1
		1