

# bosal

## Инструкция по монтажу тягово-сцепного устройства шарового типа 5258 А для автомобилей Daewoo Matiz

	2001-...
	700
	50
	13



« - »	(8182) 22-48-15
" - "	8(8442) 98-74-98
" - "	8(343) 379-39-89, 373-42-73
" - "	8(343) 26-88-308
" - "	8(3952) 710-194
" - "	8(495) 777-54-59
" - "	8(495) 745-79-11
" - "	8(495) 788-95-97
" - "	8(495) 720-51-03
" - "	8(3532) 57-99-85
" - "	8-905-899-5012
" - "	8(383) 291-59-60
" - "	8(831) 279-53-24
" - "	8(3422) 98-27-20
" - "	8(342) 220-87-87
" - "	8-927-002-90-06
" - "	8(3462) 24-00-44
" - "	8(3842) 21-14-76
" - "	8-902-940-4151
" - "	8(3452) 32-22-12, 41-52-62
" - "	8-961-213-0278
" - "	8-917-347-1700
" - "	8(351) 269-44-75, 900-72-73
" - "	8(3512) 773-76-91

462800,

« - »  
18  
: (35363) 7-05-06  
/ : (35363) 7-13-20  
(495) 785-66-07  
www.bosal-autoflex.ru

41.55-2005.

d13.

« ».


« »

d18.


87

12 130,

1			
2			
3			
4			
5			
6			
7			

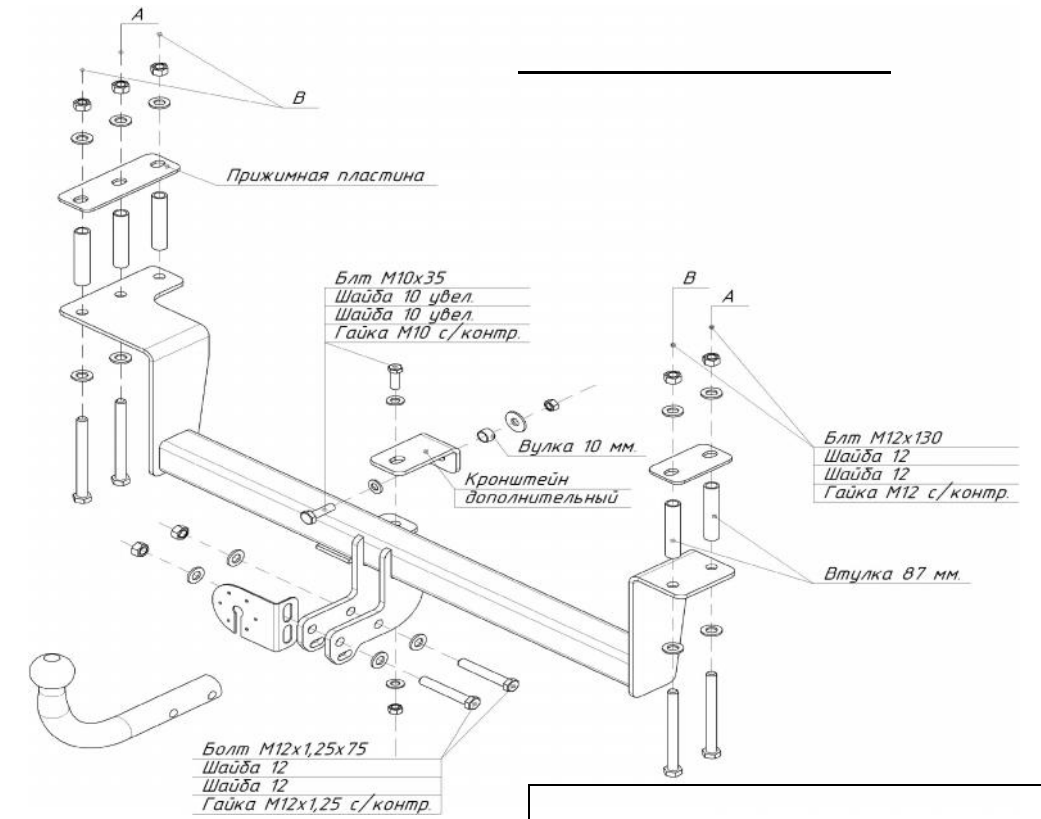

	1 .
	1 .
	1 .

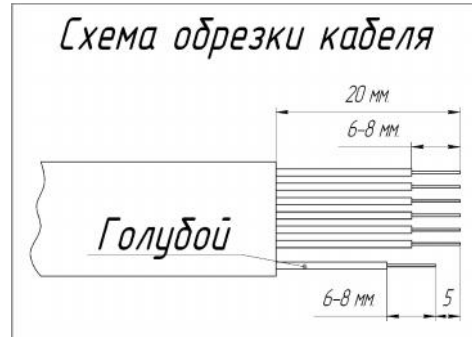

4	3 .
4	3 .
4	3 .
4 35	3 .
10 35	2 .
12 1,25 75	2 .
12 130	5 .
10 / .	2 .
12 / .	5 .
12 1,25 / .	2 .
10 .	4 .
12	14 .
10	1 .
87	5 .
	1 .
	1 .
	1 .
0181	1 .
	1 .
190	1 .
	1 .