#### FITTING INSTRUCTION

	p mark c. with	Cables joining	12 ¬
ISO	PN	cubics joining	7 — 12 —
1	L	Left directional lights	
2	+	Rear fog lights	8
3	31	Ground	
4	R	Right directional lights	A O
5	58R	Right side parking lights	
6	54	Stoplights	12 \( \tag{9} \)
7	58L	Left side parking lights	
A -	12		
		11	1 —
0			

This towing hitch is designed to assembly in following car: **HYUNDAI H1/H300, VAN and MINIBUS,** produced since 2008, catalogue number **J58A** and is prepared to tow trailers max total weight **2300 kg** and max vertical mass **100 kg**.


# From manufacturer

Thank you for buying our product. Their reliability has been confirmed in many tests. Reliability of towing hitch depends also on correct assembly and right operation. For this reasons we kindly ask to read carefully this instruction and apply to hints.

The towing hitch should be install in points described by a car producer.

## The instruction of the assembly

- 1. Take out a spare wheel.
- 2. Underneath the car find original made holes in the frame of chassis (pos. A). Through this holes fix loosely angle bars (pos. 6 and 7) using bolts M12x1,25x40mm (pos. 10) as shown in the drawing.
- 3. Put side brackets (pos. 4 and 5) to interior side of the frame of chassis and fix it loosely using bolts M12x130mm (pos. 8) and M12x120mm (pos. 9) as shown in the drawing.
- 4. Cut out a fragment of central handle fastening a bumper together with metal handle (cut out 5mm), see figure 2.
- 5. Between installed elements put main bar of the towbar (pos. 1) and fix using bolts M12x40mm (pos. 11) as shown in the drawing.
- 6. Fix body of the automat (pos. 10) and the socket plate (pos. 3) using bolts M12x25mm (pos. 11) from accessories. Place tow-ball (pos. 2) according to supplied instruction.
- 7. Tighten all bolts according to the torque shown in the table.
- 8. Connect electric wires of 7-poles socket according to the instruction of the car. (Recommend to make at authorized service station).
- 9. Complete paint layer damaged during installation.

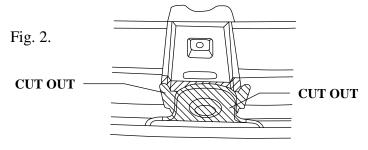

Torque settings for nuts and bolts (8,8):

**M 8 -** 25 Nm **M 10 -** 55 Nm **M 12 -** 85 Nm **M 14 -** 135 Nm


#### **NOTE**

After install the towing hitch you should get adequate note in registration book (at authorised service station). The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km of exploitation check all bolts and nuts. The ball of towing hitch must be always kept clear and conserve with a grease.

### Towing hitch accessories:

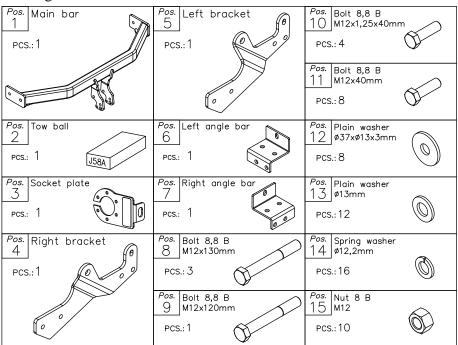



### PPUH AUTO-HAK S.J.

Produkcja Zaczepów Kulowych Henryk & Zbigniew Nejman 76-200 SŁUPSK ul. Słoneczna 16K tel/fax (059) 8-414-414; 8-414-413 E-mail: office@autohak.com.pl www.autohak.com.pl

# **Towing hitch (without electrical set)**

Class: A50-X Cat. no. J58A

Designed for:

Manufacturer: **HYUNDAI** 

Model: H1 / H300 Type: VAN and MINIBUS

produced since 2008

Technical data:

D-value: 13,52 kN maximum trailer weight: 2300 kg maximum vertical cup mass: 100 kg

Approval number according to Directive 94/20/EC: e20\*94/20\*0710\*00

#### **Foreword**

This towing hitch is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch. The vehicle manufacturer's specifications regarding trailer mass and max. vertical cup mass are decisive for driving whereat values for the towing hitch cannot be exceeded.

*D-value formula:* 

$$\frac{\text{Max trailer weight [kg]} \quad \text{x} \quad \text{Max vehicle weight [kg]}}{\text{Max trailer weight [kg]} + \quad \text{Max vehicle weight [kg]}} \text{X} \frac{9,81}{1000} = \text{D} [kN]$$