
FITTING INSTRUCTION

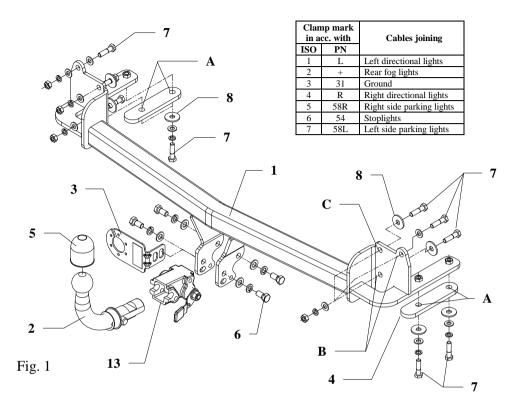

This towbar is designed to assembly in following car:


MAZDA PREMACY produced since 10.1999 till 2005, catalogue no. M43A and is prepared to tow trailers max total weight 1600 kg and max vertical load 50 kg.

The towbar should be install in points described by a car producer.

Fitting instructions

- 1. Remove rear lights and the bumper.
- 2. Remove housings of chassis extension (not used any more).
- 3. Put distance plates into chassis extension.
- 4. Put main bar of towbar pos. **1** into chassis and screw loosely according to fig. 1 through hole pos. **A** using bolts M10x40mm (pos. **7**).

- 5. Through holes **B** drill holes in rear wall plate with bit ø10mm (both sides).
- 6. Loosely fix main bar to rear wall plate through holes \mathbf{B} and \mathbf{C} .
- 7. Adjust towbar in mid-position and tighten all bolts according to the torque shown in the table.
- 8. According to figure 2 cut out elements of the bumper.
- 9. Reinstall the bumper and rear lights.
- Fix body of the automat (pos. 13) and the socket plate (pos. 3) using bolts M12x25mm (pos. 6) from accessories. Place tow-ball (pos. 2) according to supplied instruction.
- 11. Connect electric wires of 7-poles socket according to the instruction of the car. (Recommend to make at authorized service station)
- 12. Complete paint layer damaged during installation.

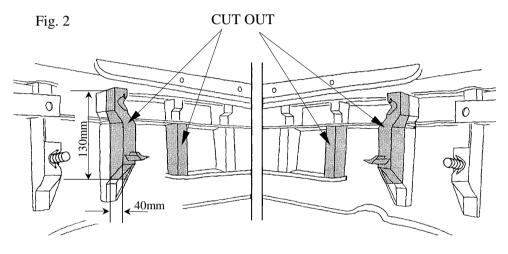

Torque settings for nuts and bolts (8,8):			
	25 Nm 85 Nm	-	55 Nm 135 Nm


NOTE

After install the towbar you should get adequate note in registration book (at authorised service station). The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km of exploitation check all bolts and nuts. The ball of towbar must be always kept clear and conserve with a grease.

Towbar accessories:

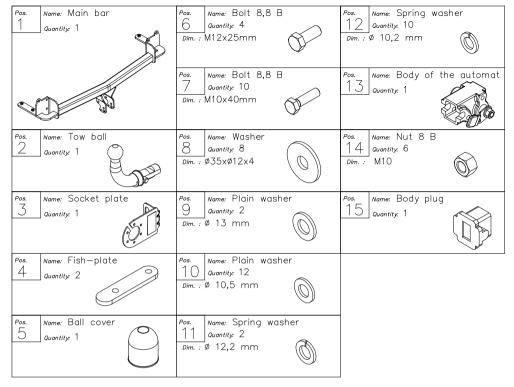



PPUH AUTO-HAK S.J.

Produkcja Zaczepów Kulowych Henryk & Zbigniew Nejman 76-200 SŁUPSK ul. Słoneczna 16K tel/fax (059) 8-414-414; 8-414-413 E-mail: office@autohak.com.pl www. autohak.com.pl

Towing hitch (without electrical set)

Class: A50-X Cat. no. M43A Designed for: Manufacturer: MAZDA Model: PREMACY produced since 10.1999 till 2005 Technical data: D-value: **8,4 kN** maximum trailer weight: **1600 kg** maximum vertical cup load: **50 kg**

Approval number according to Directive 94/20/EC: e20*94/20*1030*00

Foreword

This towbar is design according to rules of safety traffic regulations. The towing hitch is a safety component and must be installed only by qualified personnel. Any alteration or conversion to the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch. The vehicle manufacturer's specifications regarding trailer load and max. vertical cup load are decisive for driving, and values for the towing hitch cannot be exceeded.

D-value formula:

$$\frac{\text{Max trailer weight [kg]}}{\text{Max trailer weight [kg]}} \times \frac{\text{Max vehicle weight [kg]}}{\text{Max trailer weight [kg]}} \times \frac{9.81}{1000} = D [kN]$$